

# Connecting the remote control



If the remote control or batteries are changed, it may be necessary to re-synchronize the frequency of the remote control with the unit.

## Procedure

1. On the control panel of the heater, set the first selector switch to ON-Remote-OFF
2. Press the hidden button(hole on the control panel) with a sharp object such as a paper clip
3. The stove's display will show three lines - - -
4. Press the on/off button on the remote control
5. The heater will beep to confirm that the remote control is correctly connected

If your product has more than one fan (comfort air), it is possible that after replacing the remote control it is no longer possible to control the auxiliary fans. A simple setting allows you to reactivate this option on the remote control:

1. Switch off the remote control by pressing the round button behind the display
2. Press the 3 buttons simultaneously: Button O + ENTER + the round button behind the screen
3. After a few seconds, a flashing number will appear on the screen, which is the current number of fans configured (for example: 1)
4. Use the arrows to configure the desired number of fans
5. To confirm, press the ENTER button