



- A= Airplus \varnothing 80 mm
- R= Rookgasuitgang \varnothing 80 mm
Rauchgasabgang \varnothing 80 mm
Sortie des fumées \varnothing 80 mm
- E= Externe luchttoevoer \varnothing 50 mm
Externe Luftzufuhr \varnothing 50 mm
L'air de combustion \varnothing 50 mm